

# Pyramid Canopy Instructions



## You Will Need:

- 4x Base Plates
- 4x Base Pins
- 4x Uprights (Any Height - All Same)
- 8x Crossbars (Any Length - All Same)\*
- 4x Pyramid Canopy Upright Couplings
- 1x Pyramid Canopy Center Coupling
- 1+ People to Help You with Steps 4+

**\*Note:** Crossbars must be used at a length that allows them to be locked into a fixed length

## Step 1:

You will need: 4x Base Plates, 4x Base Pins, 4x Uprights

Begin by setting up your 4 bases and uprights as normal.


**NOTE:** To make the rest of the setup easier, leave your uprights at their shortest height and raise them to the desired height after completing the setup.

## Step 2:

**You will need: 4x Pyramid Canopy Upright Couplings**

Place the 4 Upright Couplings on top of the Uprights. These simply fit into the top of your uprights ( You will need to remove the caps from the top of your uprights if they are present)

**The photo below shows how your uprights should look if the coupling is installed correctly.**

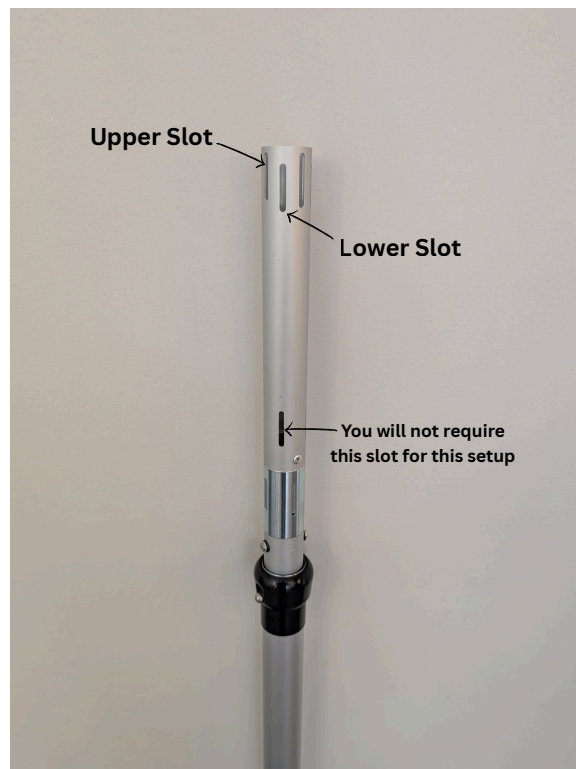

## Step 3:

**You will need: 4x Crossbars**

Now you will add your 4 horizontal crossbars to create a square with your uprights. Ensure these crossbars are installed into the upper slots of the coupling.

**The photo below shows the correct installation.**

**\*It is important to ensure the lower slot is not used as it will be used later on to secure the pyramid crossbars.**



**IMPORTANT NOTE:** If you intend to use drapes (or any décor that requires removing the crossbar from the upright to install) on these crossbars they must be added at this point as it will not be possible to remove the crossbars after the canopy is added.

## **Step 4:**

**You will need: 1x Pyramid Canopy Center Coupling, 4x Crossbars**

**NOTE:** From this point forward it will be beneficial to have at least one extra person to assist

In this step you create the pyramid. Having someone help you by holding the center coupling as you add the crossbars will make this step much easier.

4a) Crossbars in this step will be installed upside down (by hooking into the top of the upright slot instead of the bottom) For each corner, take a crossbar and hook it into the lower slot (see step 2 for picture) of the upright coupling, ensuring the crossbar is upside down.

4b) Once you have hooked the crossbar into the upright, you will now hook it into the center coupling held by your assistant.

4c) Repeat this step with the remaining 3 crossbars, while your assistant holds the center coupling.

**IMPORTANT NOTE:** The crossbars will not be secure in the center coupling at this point.


**See photos below for visual explanation of this step.**

**4a) The crossbar should be hooked into the lower slot between the other crossbars, with the hook upside down as shown**



**4a) You will now have 3 crossbars installed into your upright coupling with the diagonal pyramid crossbar in the center**



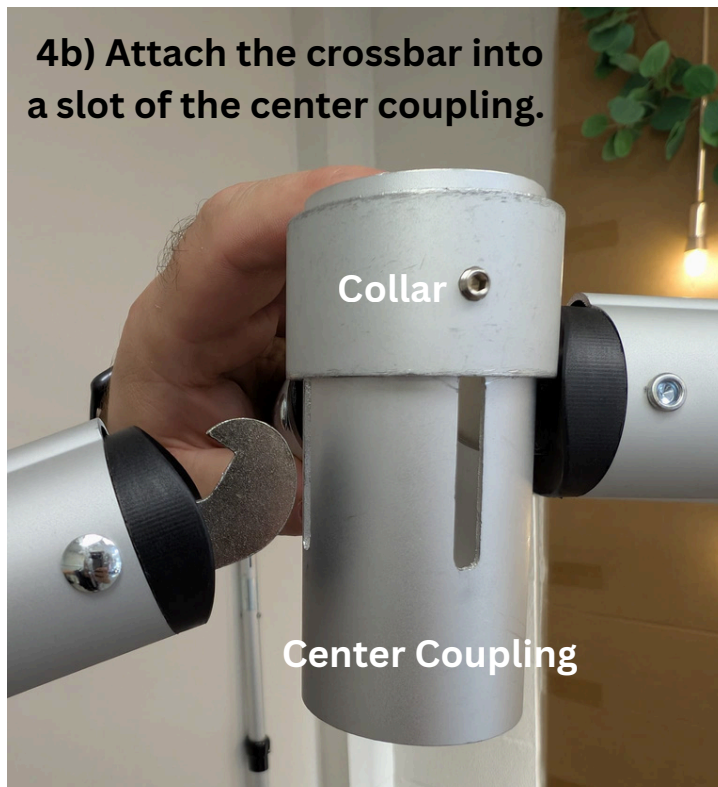

## **Step 5:**

Now that all 4 of your crossbars have been connected from the uprights to the center coupling, the collar (see above photo) of the center coupling can be slid down from the top to secure the crossbar ends below it. The collar should go over the hooks of the crossbars and the canopy will now feel secure.

**It is important to push down on the collar and wiggle the crossbars if needed to ensure a secure fit.**

**Now you have a completed Pyramid Canopy ready to decorate!**